 


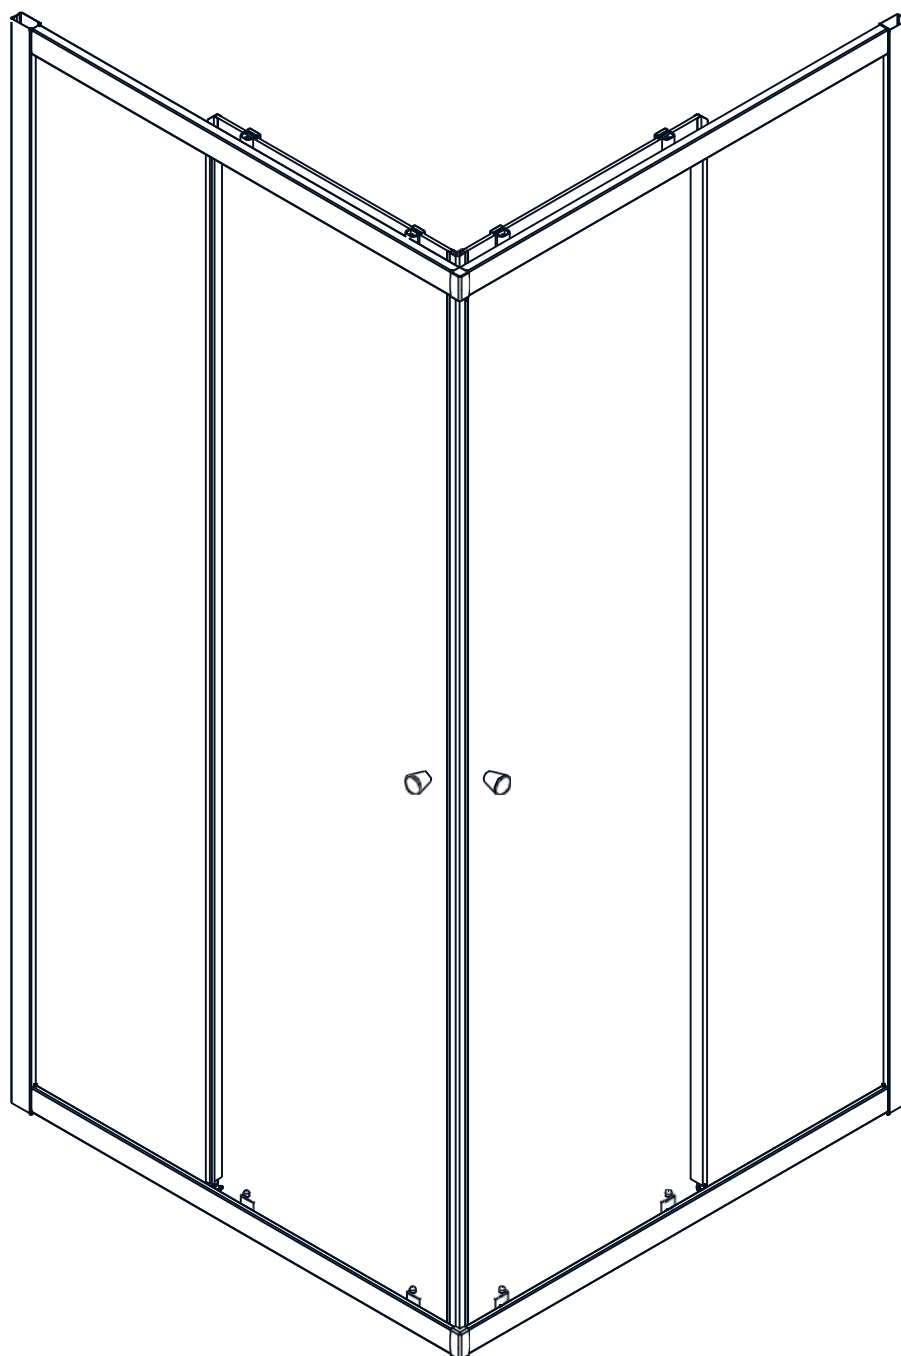 





 
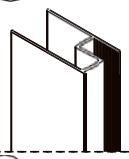 

 

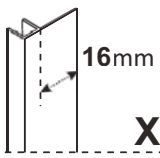 

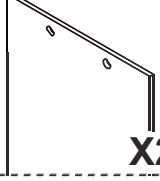 
 



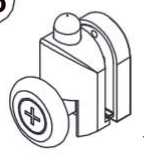 



 

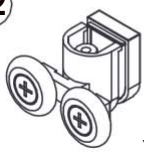 

# montážní návod / installation instruction

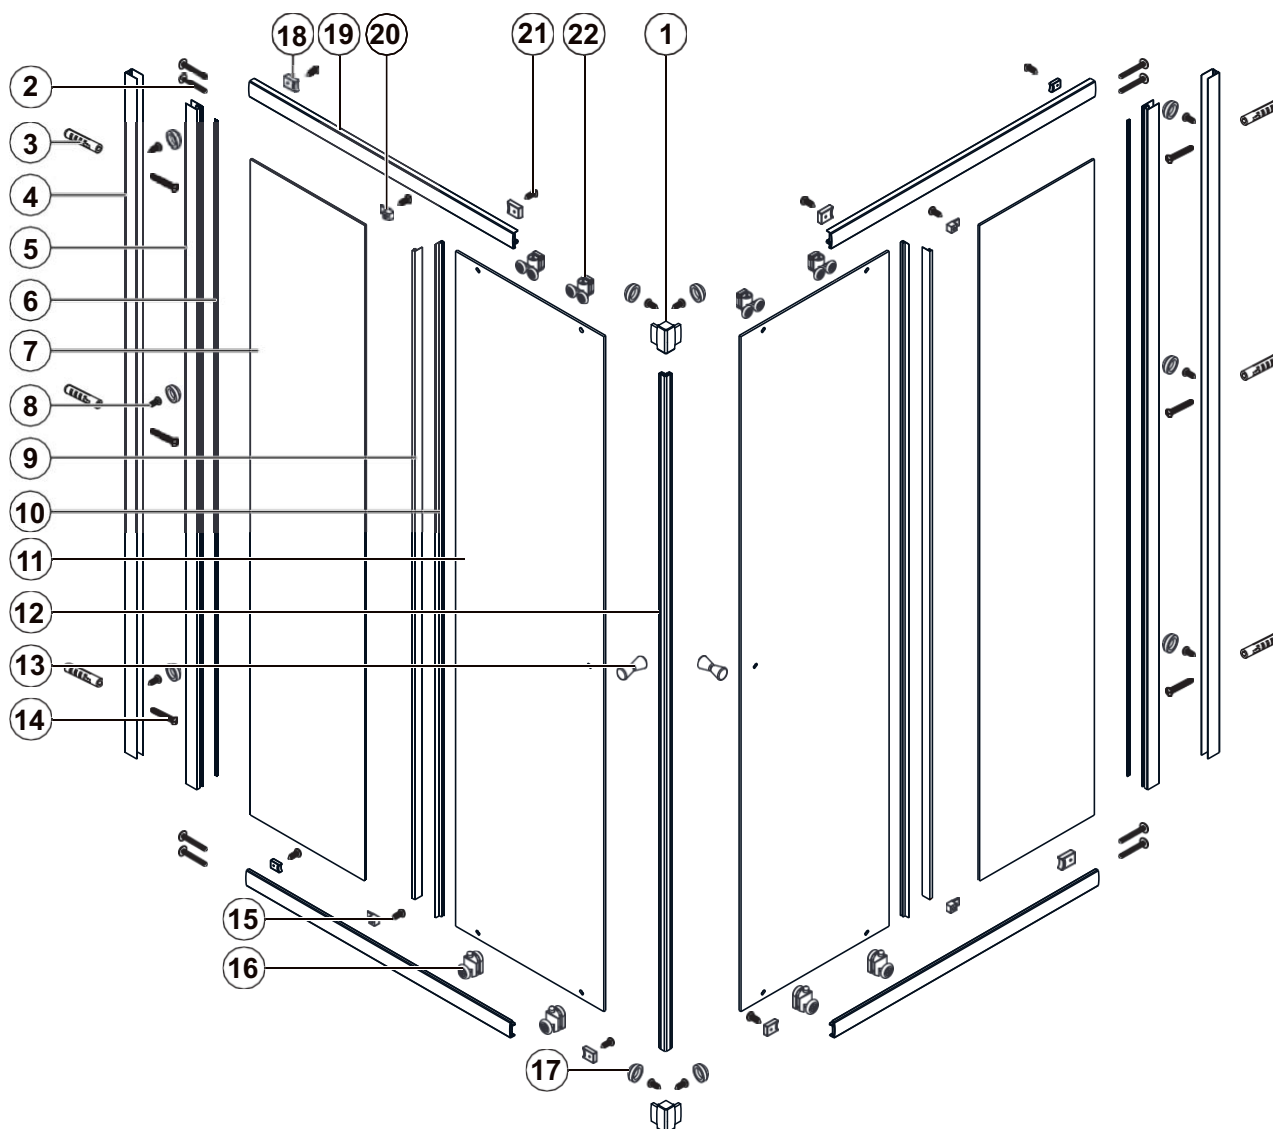BLF808 / BLF909




# PARTS LIST







 
1  X2	2  ST4*30 X8	3  X6	4  X2	5  X2	6  X2
7  X2	8  ST4*13 X6	9  16mm X2	10  12mm X2	11  X2	12  X1
13  X2	14  ST4*40 X6	15  ST4*10 X4	16  X4	17  X10	18  X8
19  X4	20  X4	21  ST4*8 X12	22  X4	23  Φ3 X1	

# TOOLS



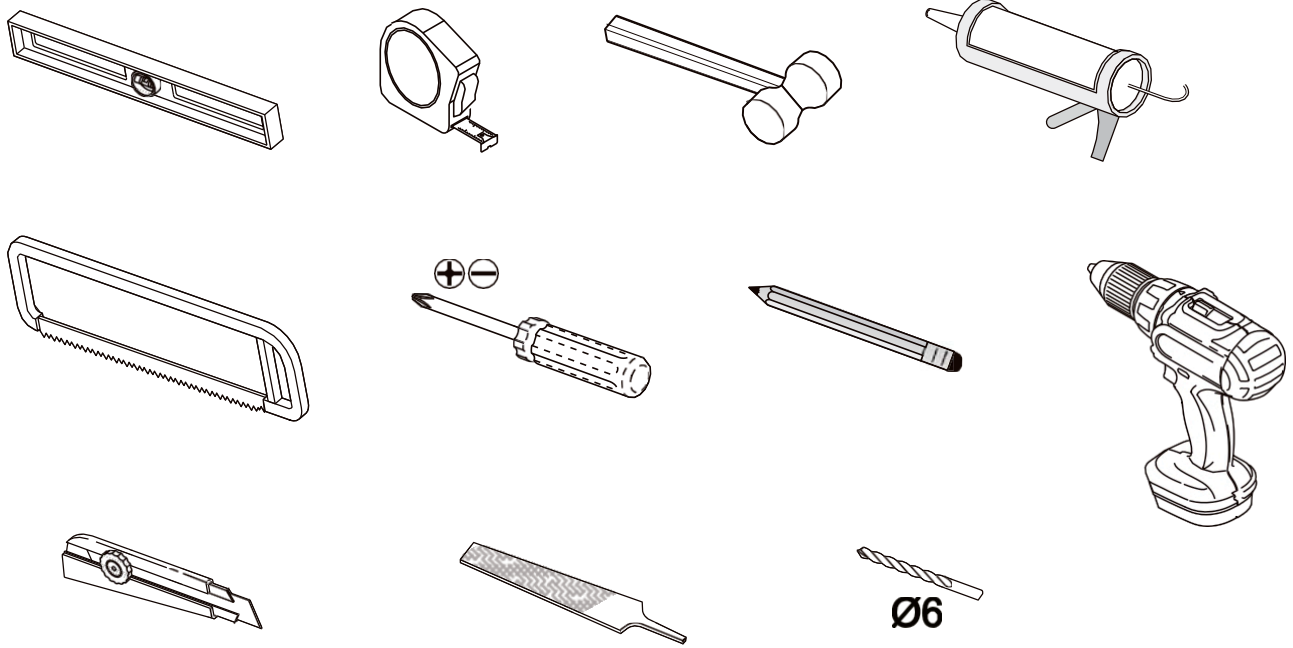


# INSTALLATION



 
 
 
 
 
## STEP 1

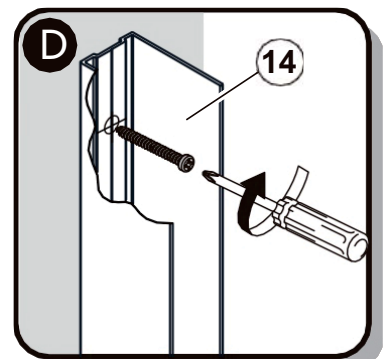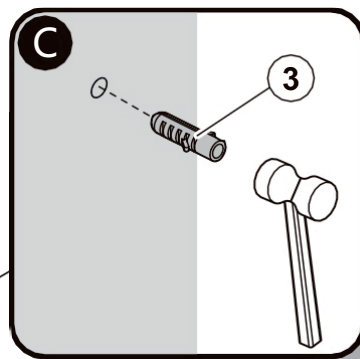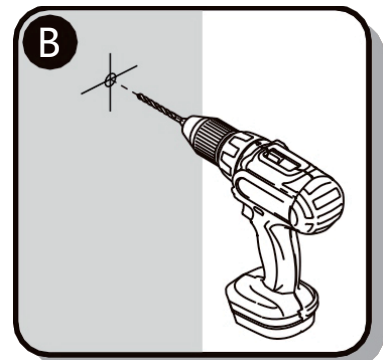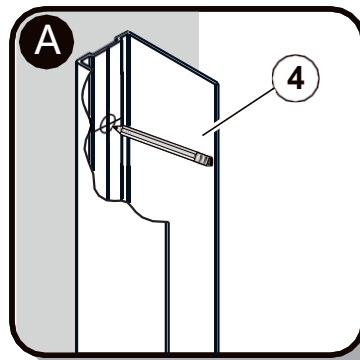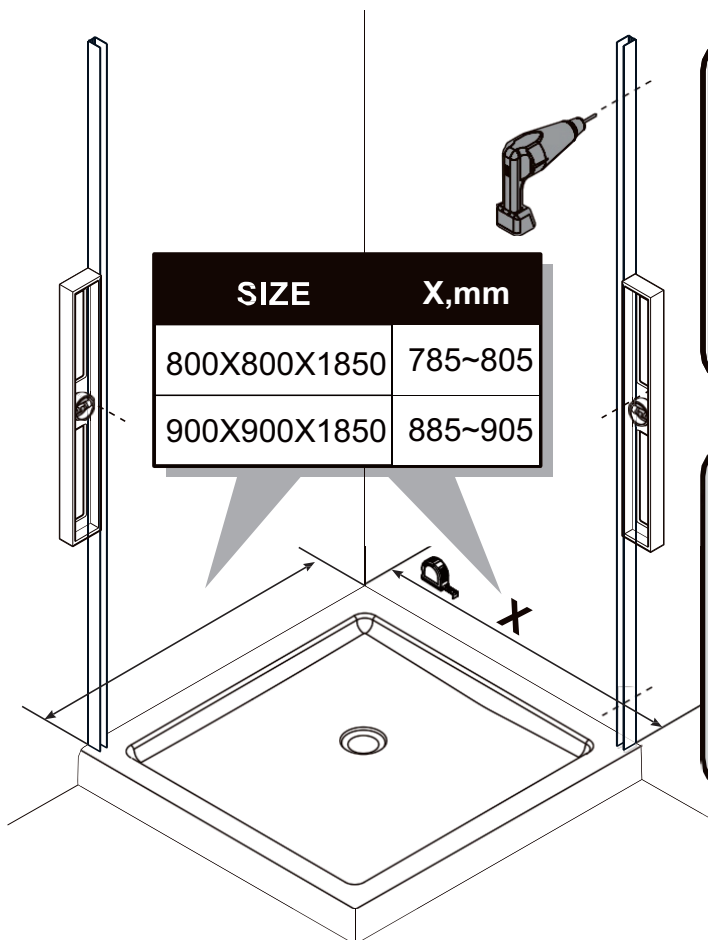








## STEP 2

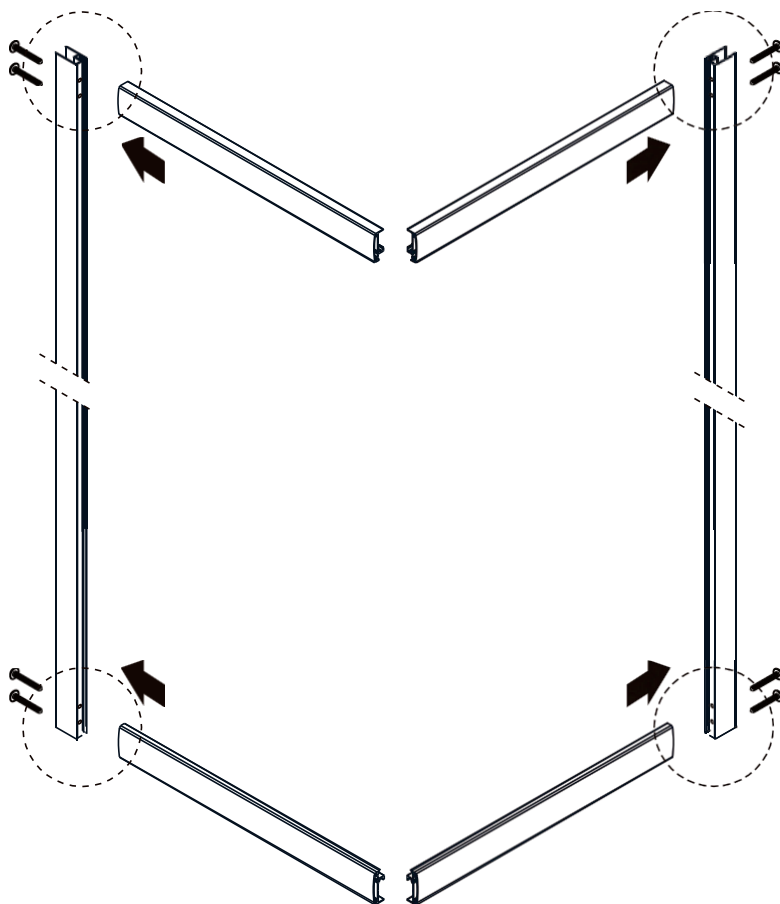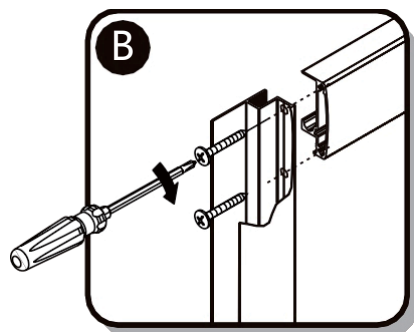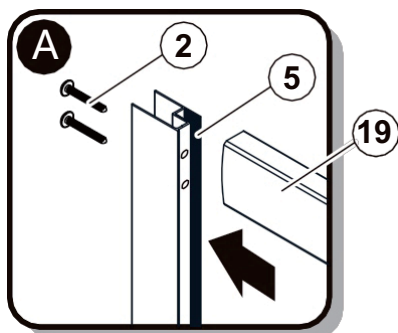   








## STEP 3

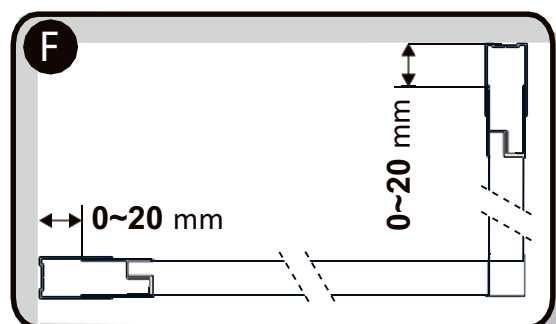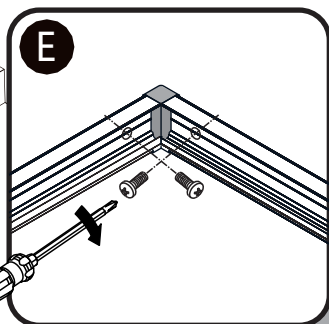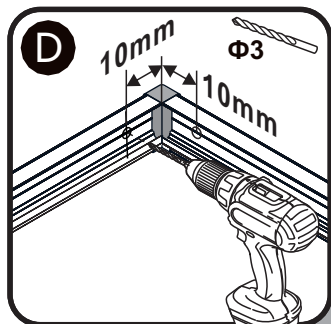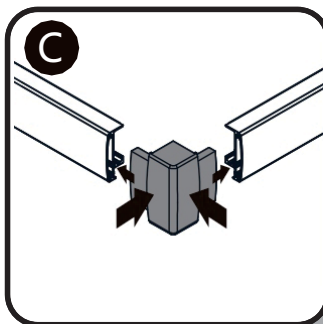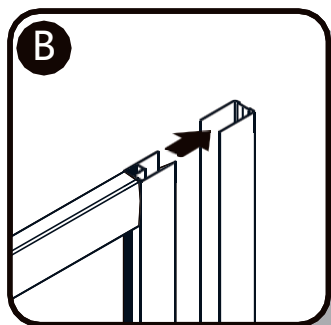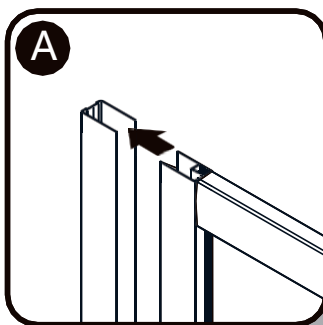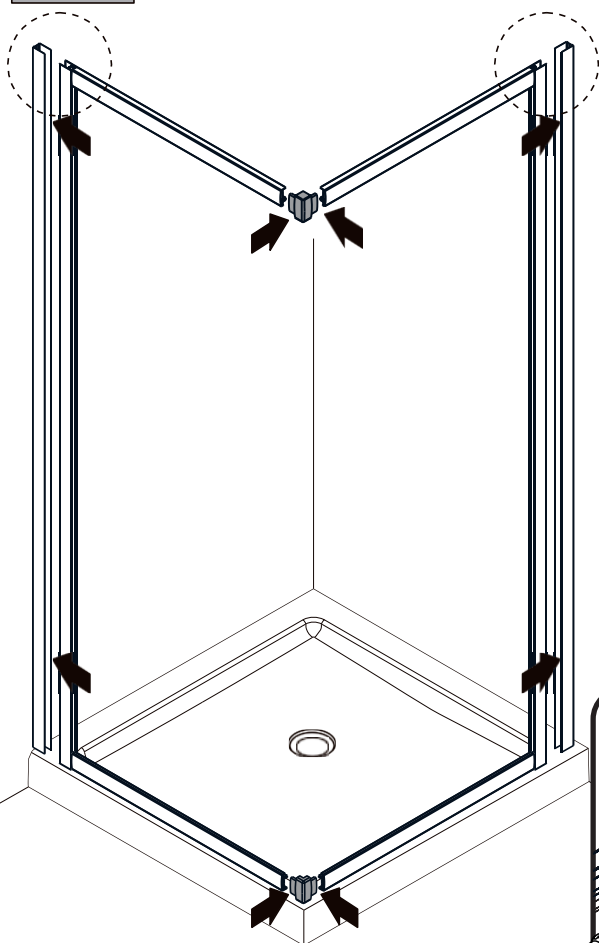       


# STEP 4

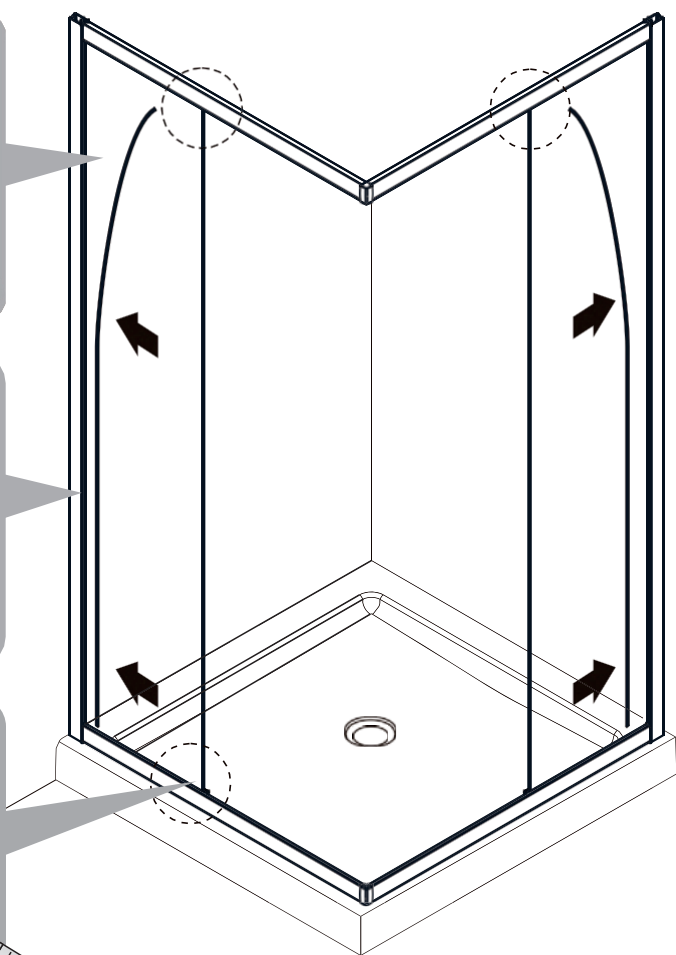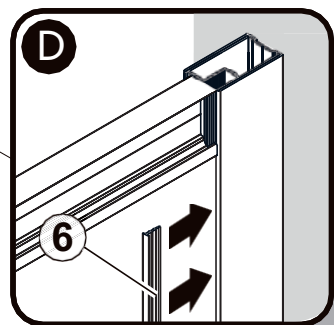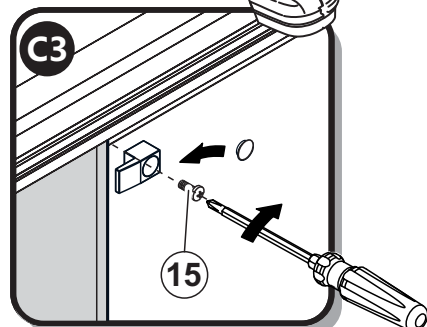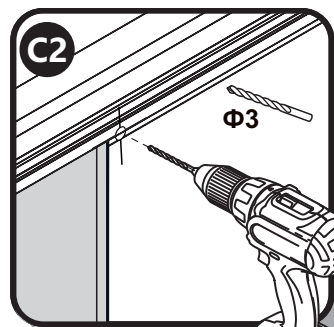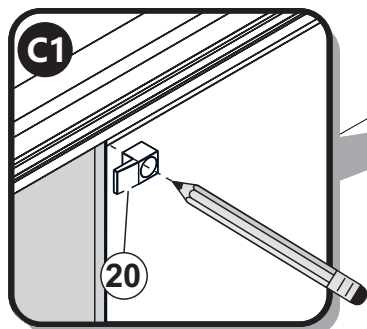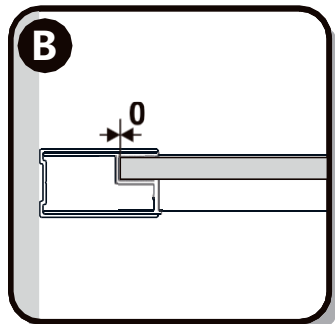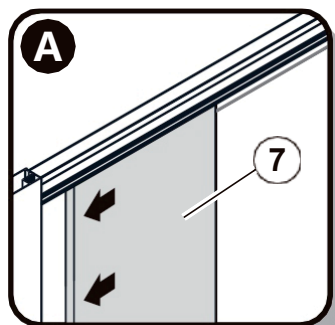       


# STEP 5

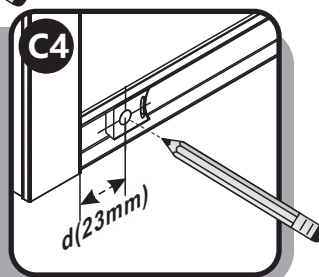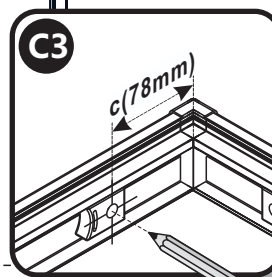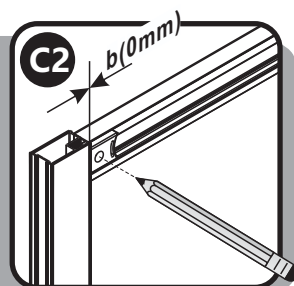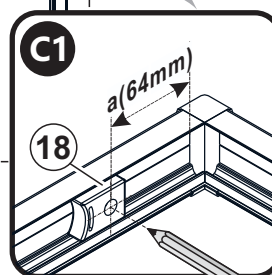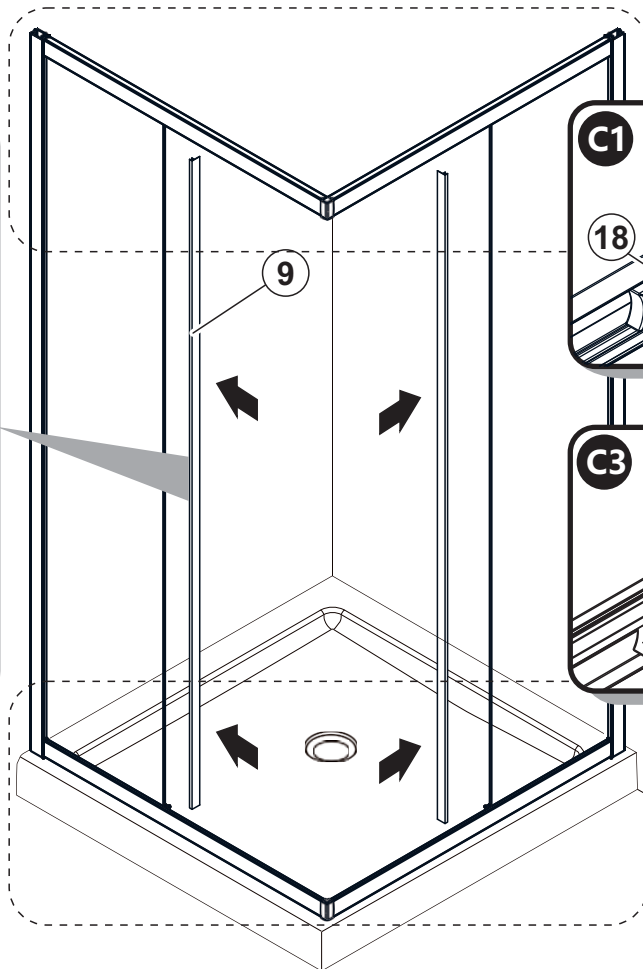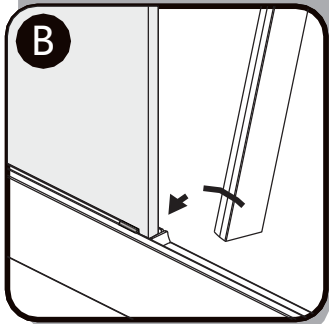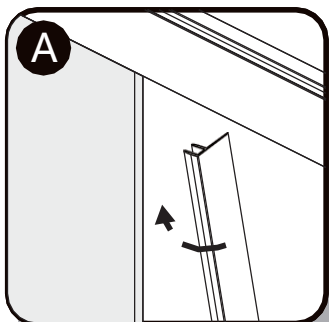       

 STEP 6



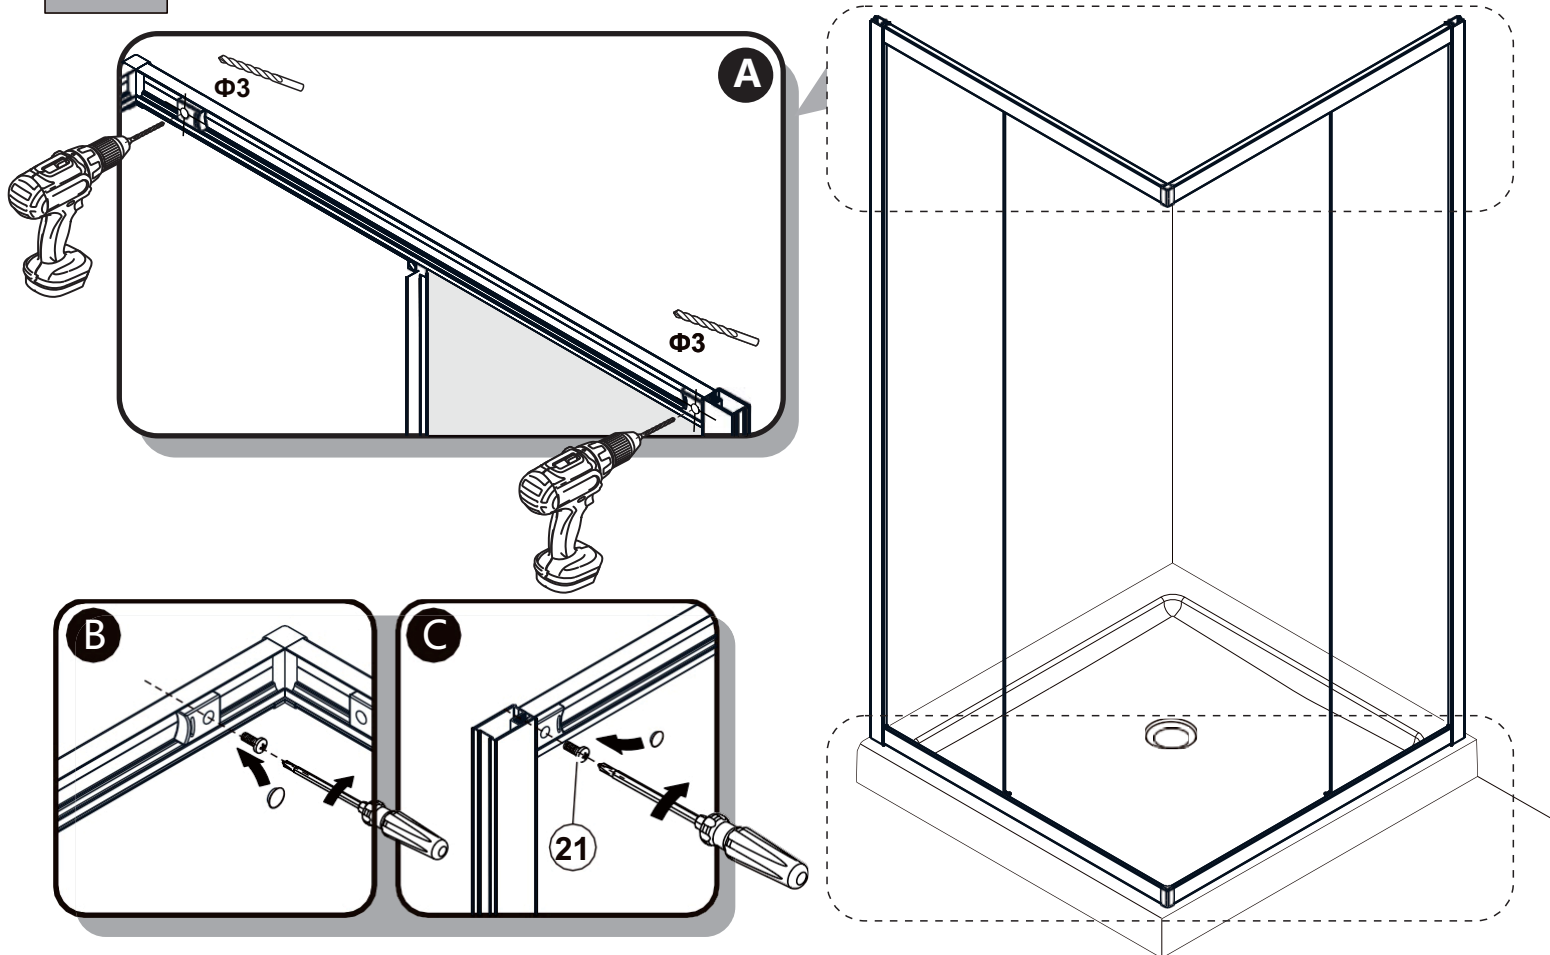


 STEP 7


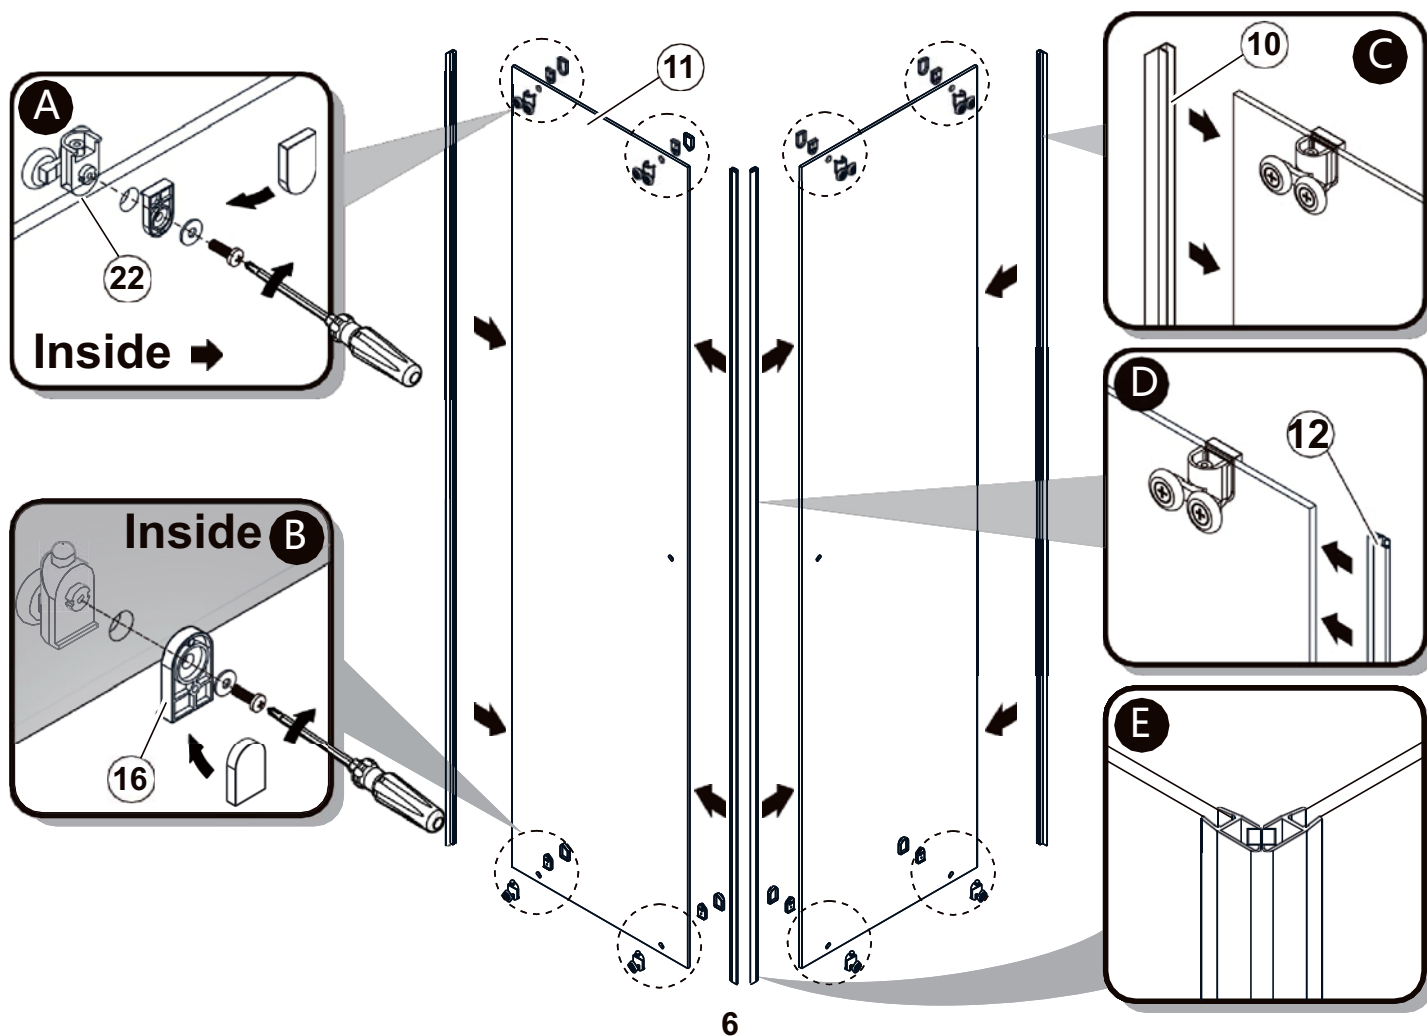




  
 
STEP 8

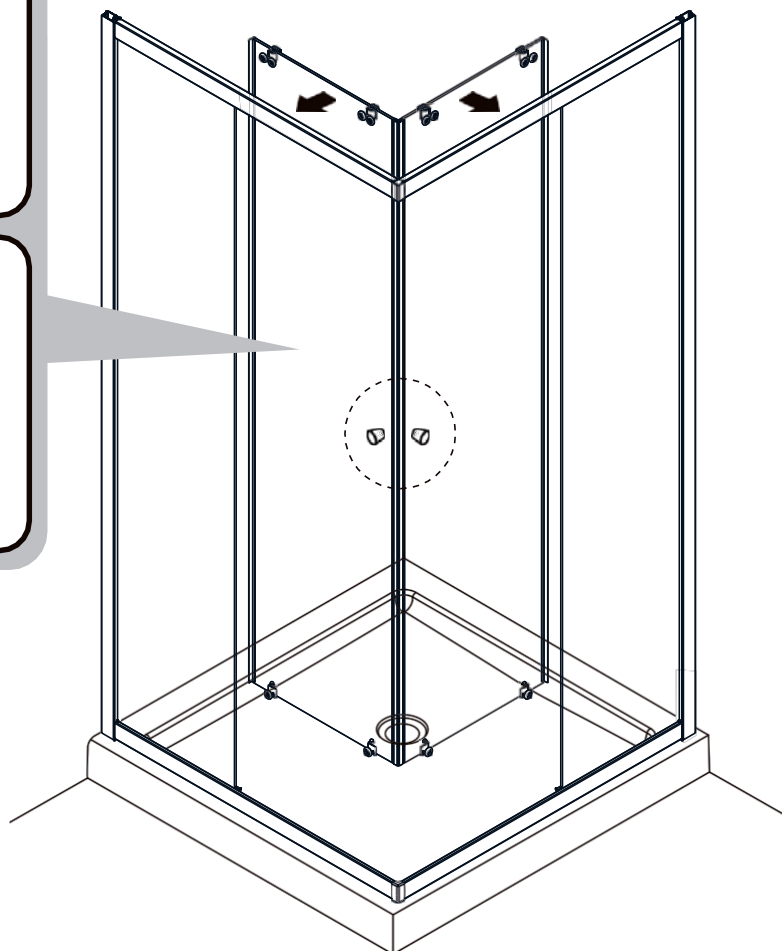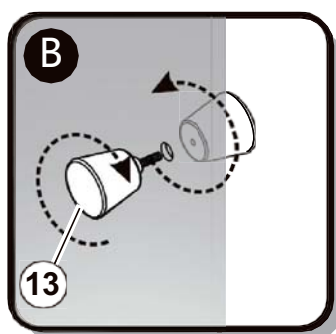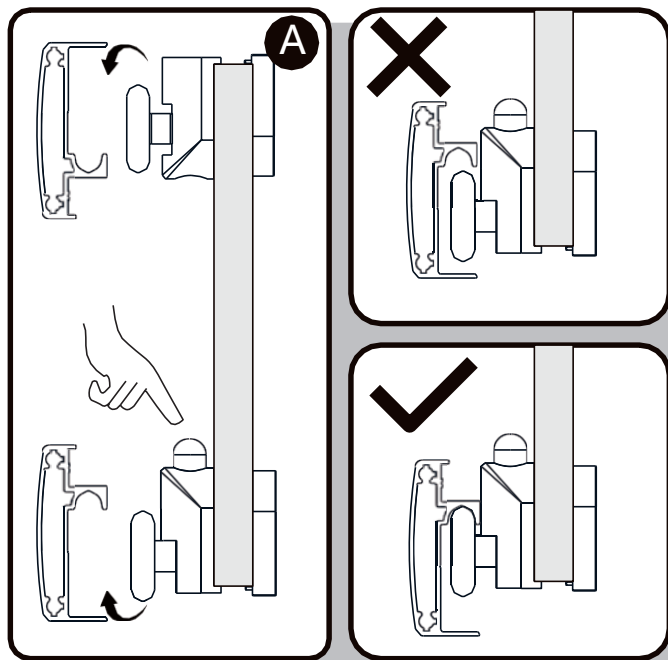

  STEP 9

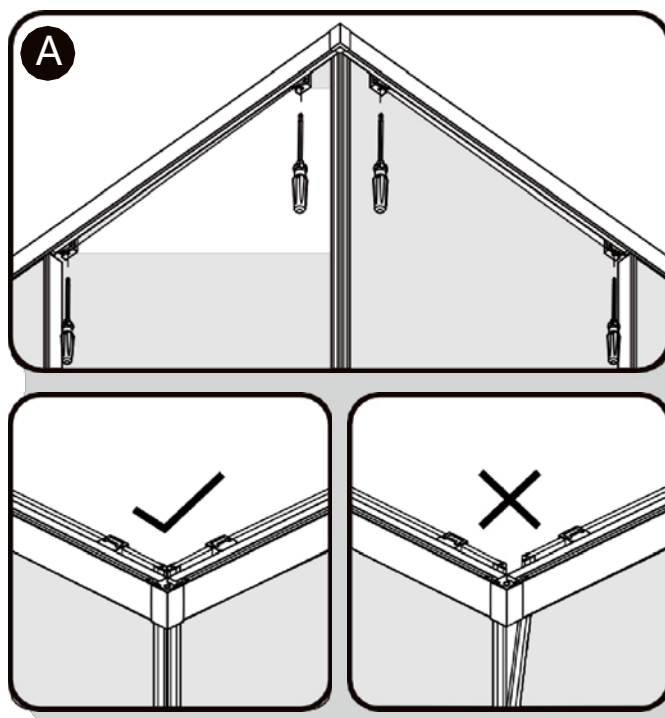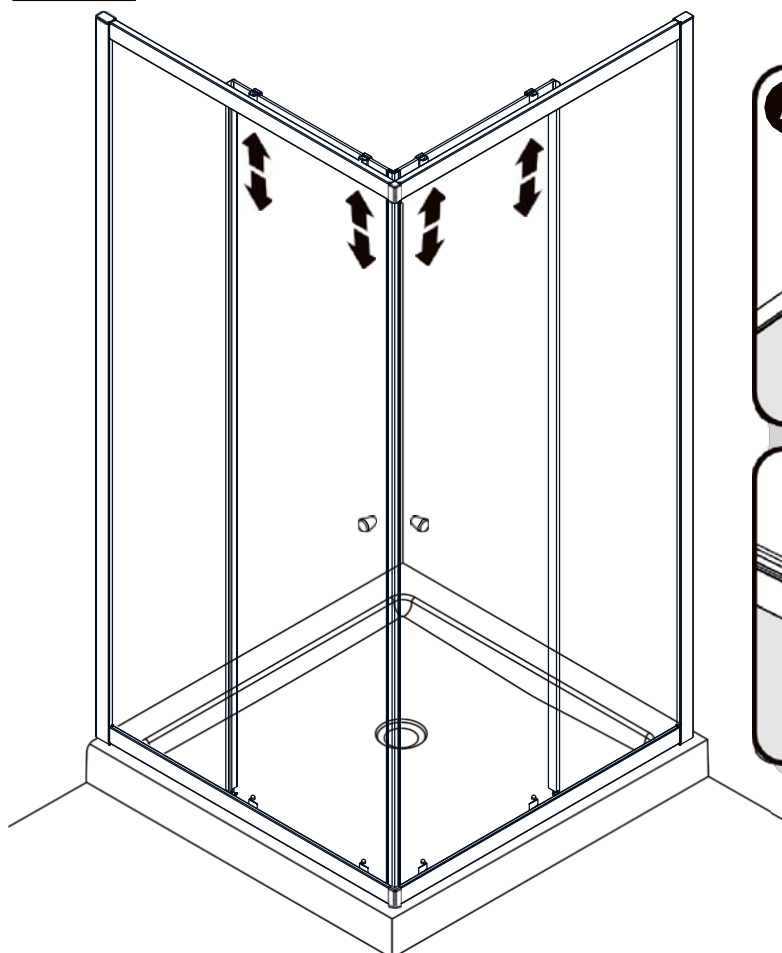

  STEP 10

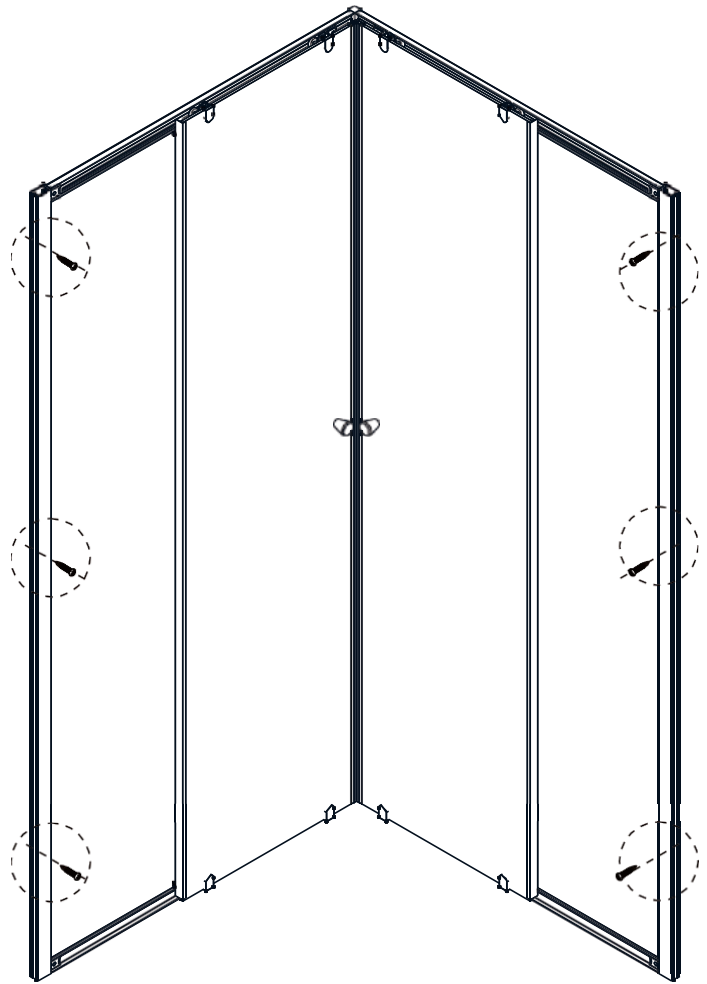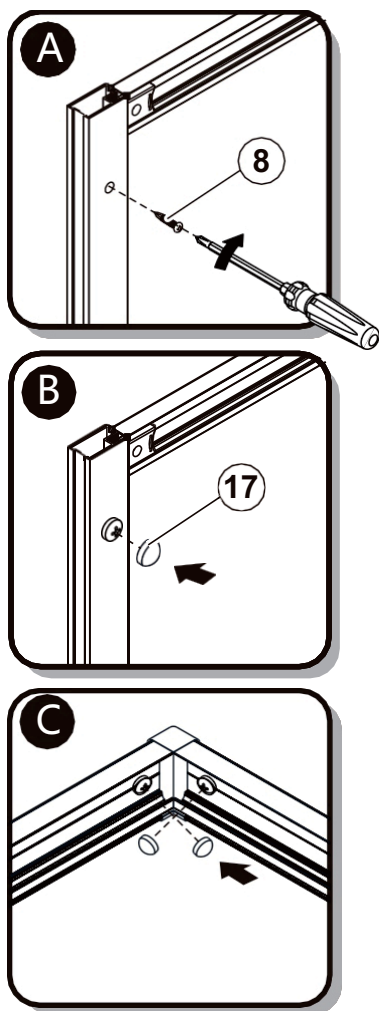

STEP 11

