


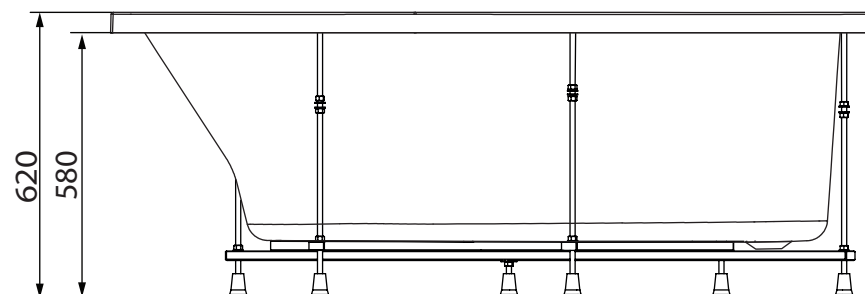










# polysan

## TIGRA 150 L

GB Mounting instructions  
CZ Montážní návod  
H Szerelési utasítás  
RU Инструкция по монтажу  
D/A Montageanleitung  
PL Instrukcja montażu

RO Instrucțiuni de montaj  
ES Manual de instrucciones  
FR Notice de montage  
NL Montage instructie  
LT Montavimo instrukcija  
SK Montážny návod



- 01 2x M12 
- 02 23x M12 
- 03 3x M12 
- 04 10x 6x20 
- 05 10x M10/19 
- 06 18x M12/23 
- 07 1x M12/36 
- 08 6x 
- 09 6x 
- 10 5x 
- 11 6x 


12 5x 580




13 1x 100




14 1x

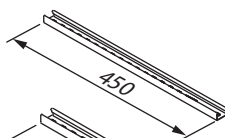

15 1x

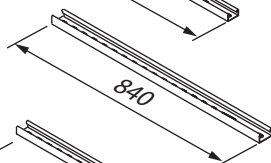

16 1x

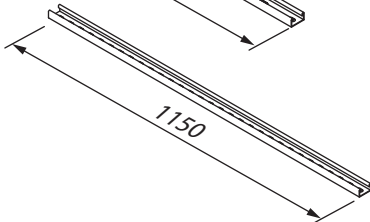

17 8x 8x40




18 2x M10/23



19 2x M10



20 4x




21 2x




22 2x M10





23 8x 4x40

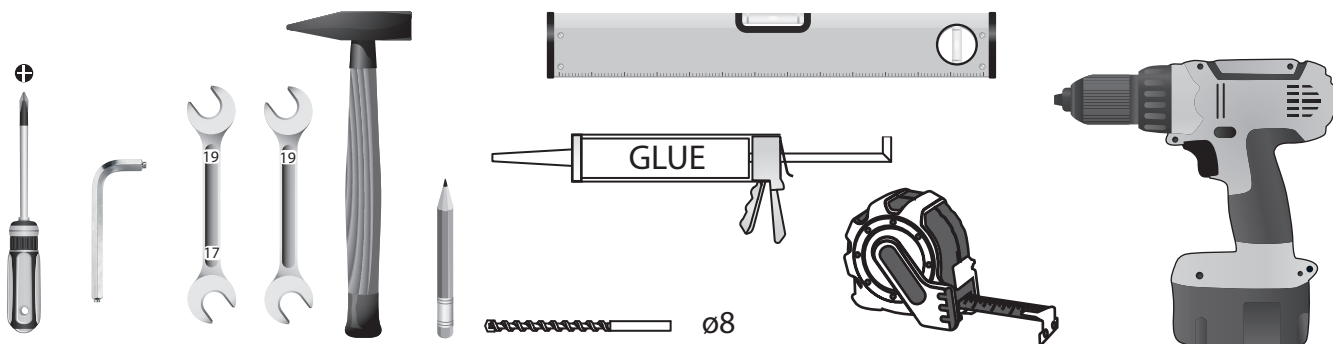


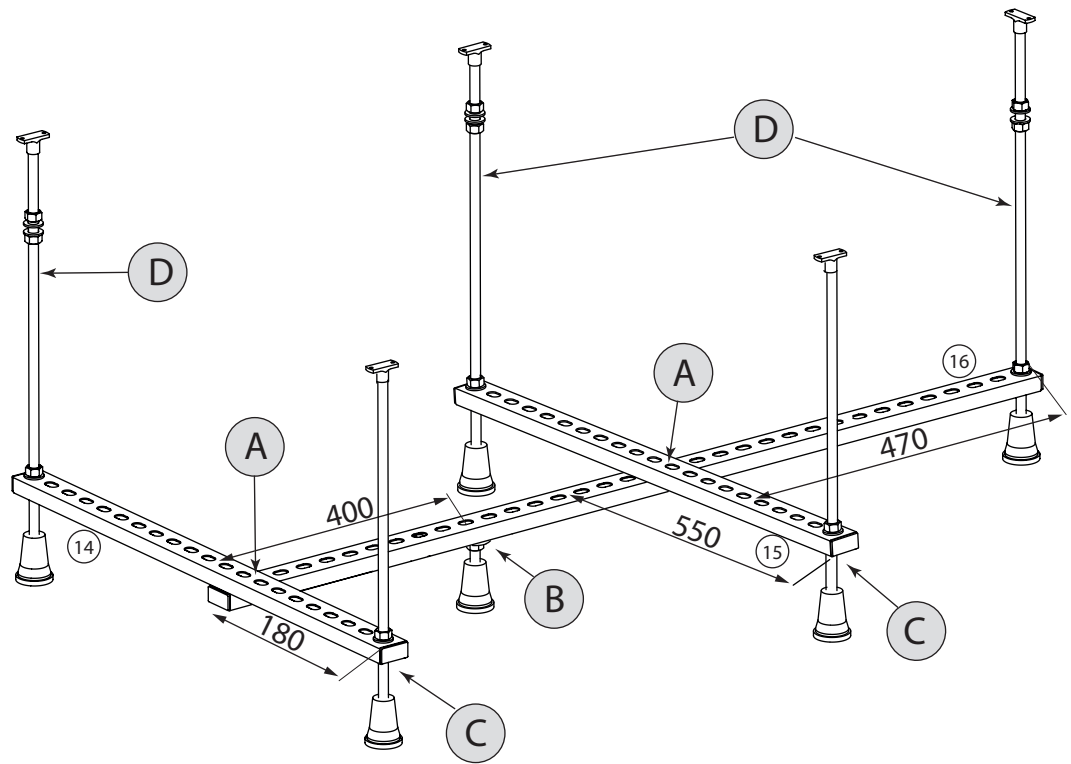

Assemble upside down on a soft mat.

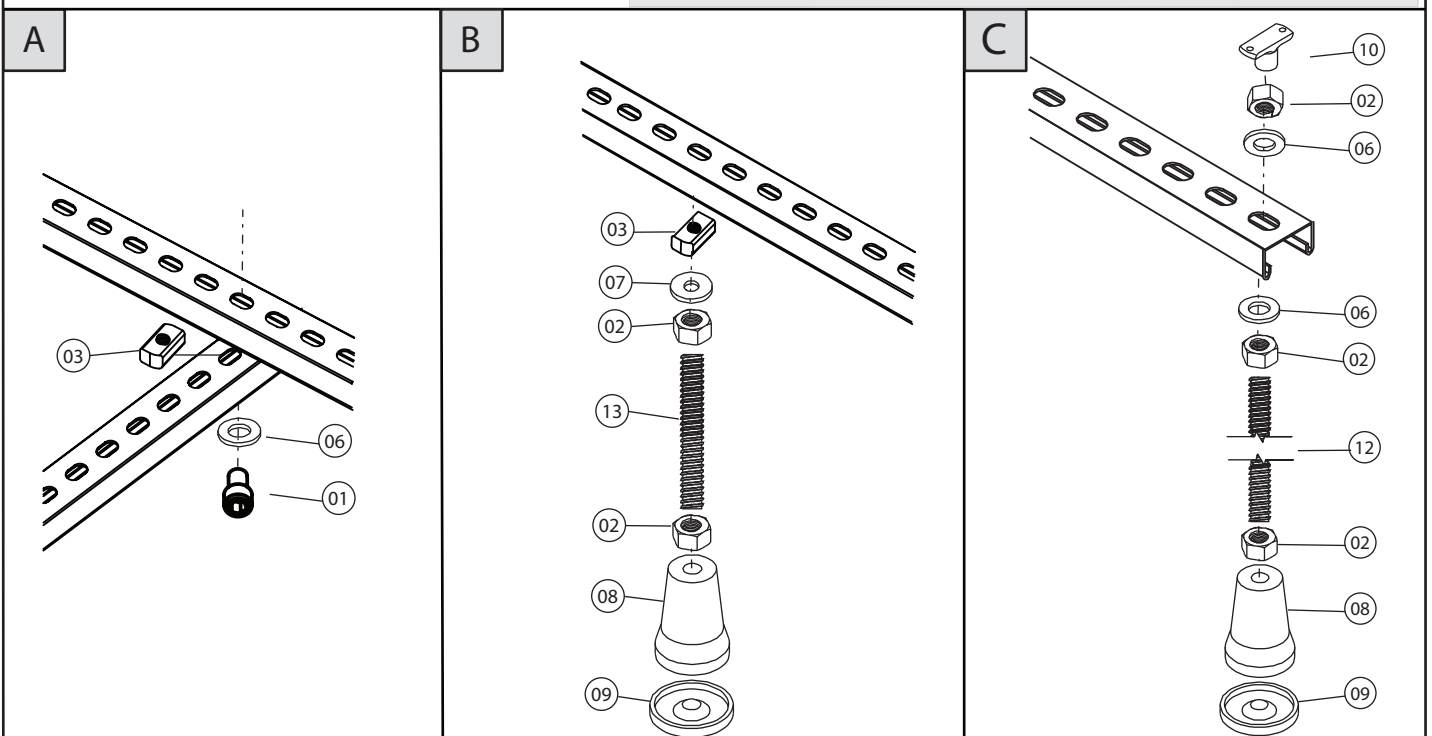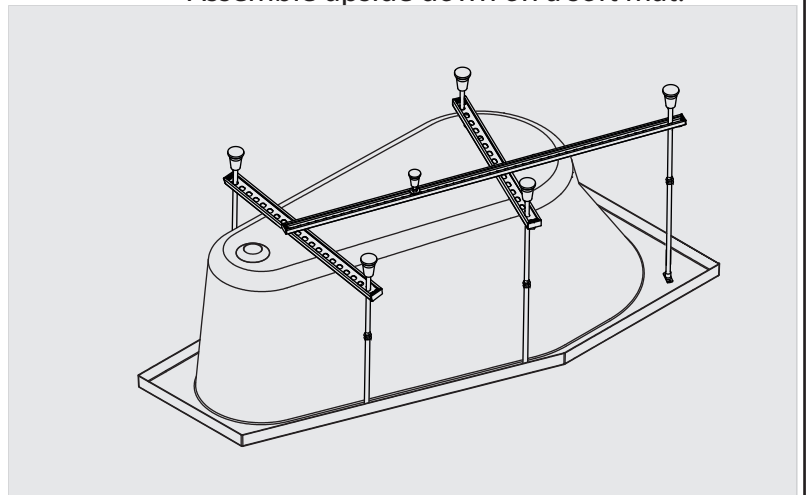


D

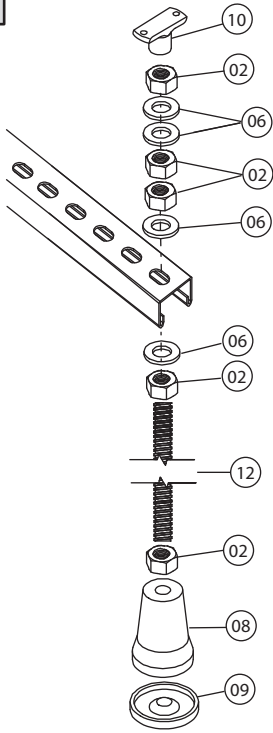


GLUE NOT INCLUDED



Glue

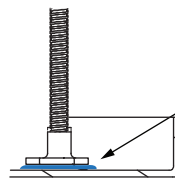

5x

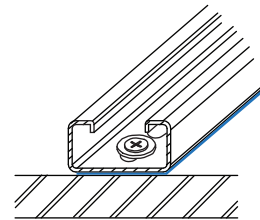

E

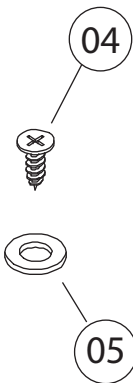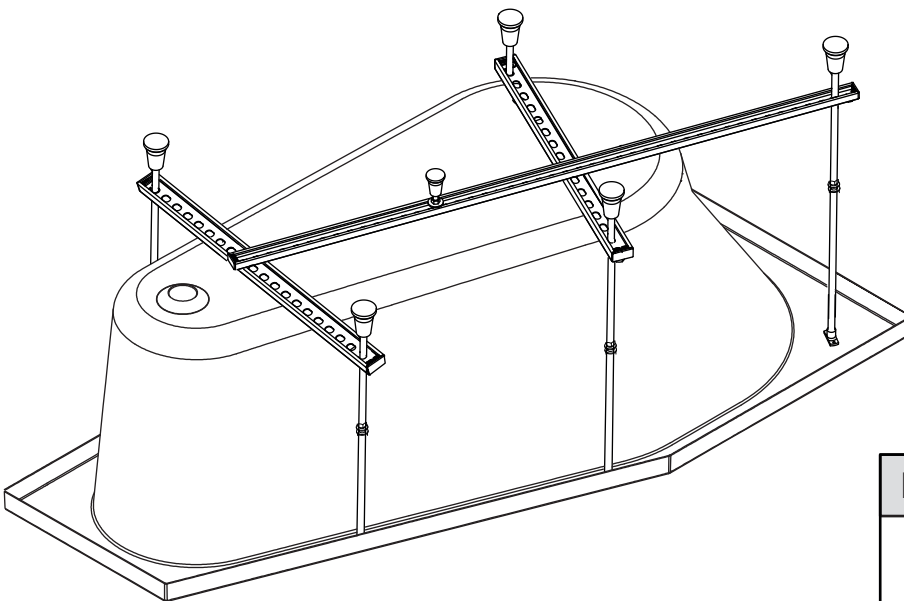

F

